
# Item No.: GET119E-L

# Installation guide

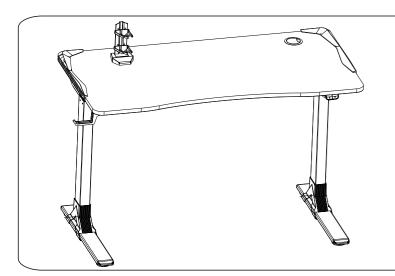

## Technical Data

tem No.	GET119E-L
Column Design	2-stage & enhanced column
Maximum Load	50KG
Max Speed	25mm/s
Highest Position	1250mm
Lowest Position	750mm
Height range	500mm
Inner tube	70mmx40mm
Outer tube	75mmx45mm
Desktop	1200mmx600mmx18mm MDF

# Accessory List


Attention: The drawings below are only for reference which might be slightly different from the actual object, please in kind prevail. Any tools missing or installation problems, please contact the customer service firstly.





## Part List


No.	Part	Qty	No.	Part	Qty
1	Tabletop set	1	2	Left lifting column set	2
3	Feet	2	4	Power plug	1
5	Cable Tie	4	6	Lifting column cover	2
7	Feet cover	2	8	Handle Rack	1
9	Headphone Hook	1	10	USB Cable Switch Rod	1
11)	Handset	1	12	USB Cable	1
13	Remote Control	1	14)	Handset Hook	2
15)	Handset Support Rack	1			


### Installation Instruction

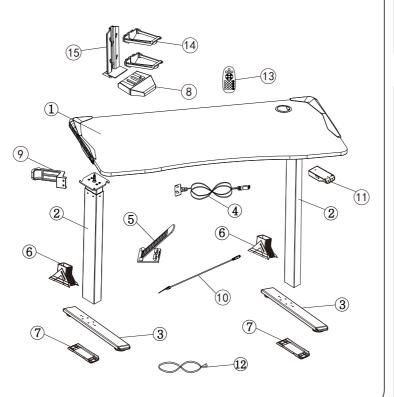


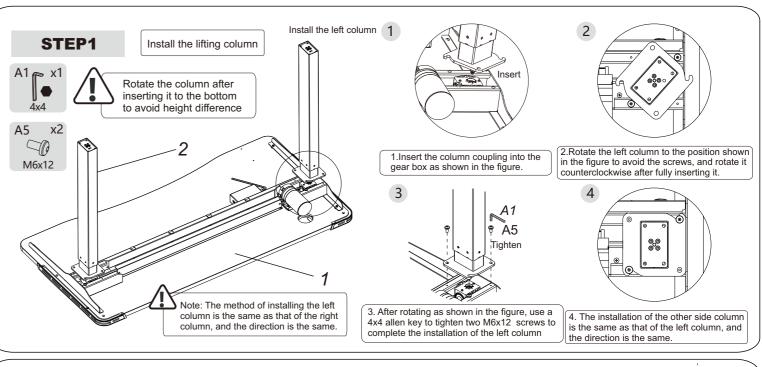

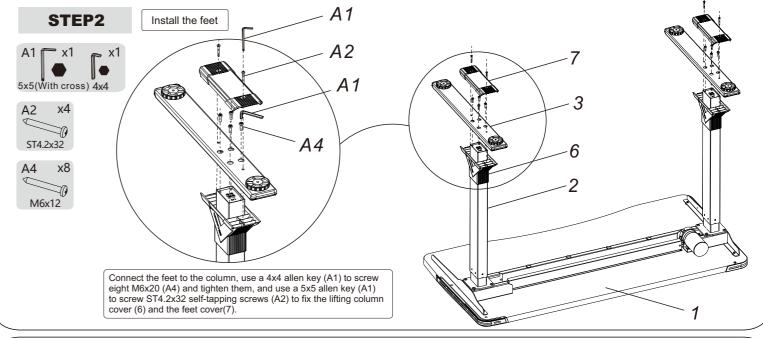

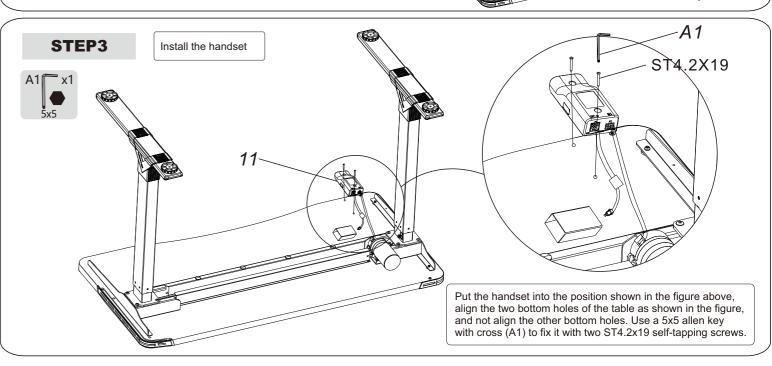

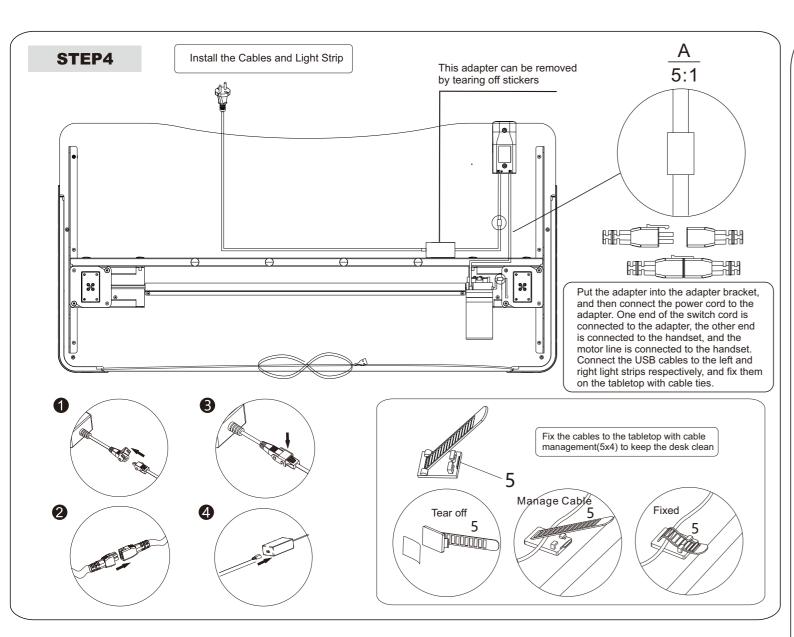

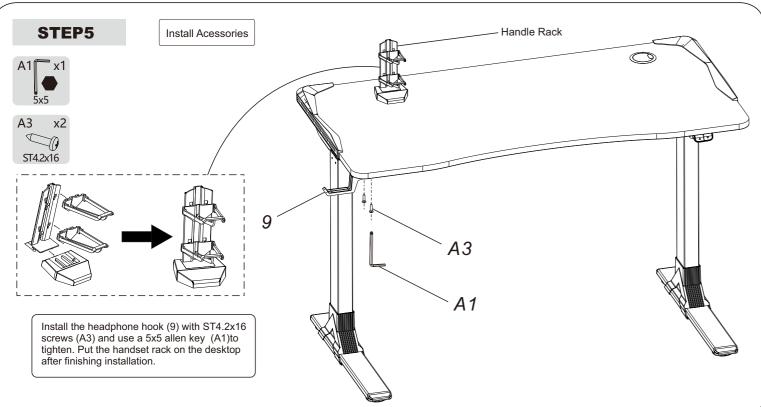

#### How to use handswitch

	•	"▲"	Adjust the desk upwards
ſ	•	"▼"	Adjust the desk downwards

#### Instruction

- Lifting Funcion press the "▲"or "▼" button to increase or decrease the height
- Reset Function

(1) Hold the "▼"button for more than 5 seconds to enter reset mode when at the lowest position. The reset is not completed until the lifting system reaches the bottom, then rebounds to stop.

(2)When the lifting system fails, release the button and long press the "▼" button. The reset is not completed until the lifting system reaches the bottom, then rebounds to stop.

• Resistance Function

(1) Built-in sensor, when encountering any objects, the device instantly stops and reverses to avoid damage.


(2) Simultaneously press the "▲" and "▼"button for more than 5 seconds to turn off or turn on the resistance function.

# Attention

#### Common fault treatment

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

	Fault phenomenon	Method	
	No response while long pressing down arrow after connected with	Check if all the cables be connected well	
	a power supply	2.Contact your supplier or dealer	
	The desktop could not be lifted	1.Check if overloaded, max loading: 50kg	
		2.Contact your supplier or dealer	
	Overwork (Duty cycle:Max 2min on/30min OFF)	Restart it after suspend for 30mins for the working time is too long	
		2.Contact your supplier or dealer	

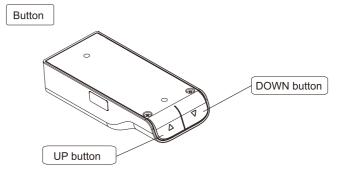

- 1. Power supply: AC100V-240V,50/60HZ
- 2. Service Environment: 0-40  $^{\circ}\mathrm{C}$

Remote Control

Monochrome Area-

16 Single Colors 8 Dynamic Modes

18m Long Distance Control

3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to letting, whe the dust of suitace with significant distributions, the careful not to letting the drops into the internal parts, not loose the connector.

4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of

\_\_\_\_\_\_

Brightness Adjustment

-- Monochrome Area

Seven-color Flashing

Monochrome Strobe/

Monochrome Gradient

Three-color Flashing/

Seven-color Gradient

Three-color Changing/

Seven-color Transforming

- it in accordance with each country's environmental legislation, not the general household
- Check carefully to ensure correct and complete assembly before using.
   Be familiar with all functions and program settings of the product before first use.
- 7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on
- 8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.
- 9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
- 10. Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.

  11.Keep the original package of the equipment if necessary in case of the future use in
- 12. The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

## Waste disposal





This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.